


FLEXLOK®


About FlexLok®

- Install a flexible floating floor; no glue on the sub-floor
- Install on any substrate (VCT, wood, etc.)
- Install at your own pace, this adhesive won't dry out
- Features low VOCs for better indoor air quality
- Maintains all performance expectations without compromise
- Available for use with the following Ultra Set RC PVC offerings:

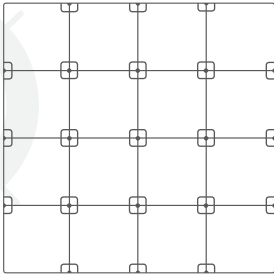

Quarter Turn, Monolithic and Multi-directional

Lay anchor rows and place a FlexLok® tab at every joint. Install remaining carpet tiles using a step method, placing FlexLok® tabs at each joint. Place a FlexLok® tab at every joint around the perimeter of the room. Monolithic installation method will install 150 sq yds of carpet.

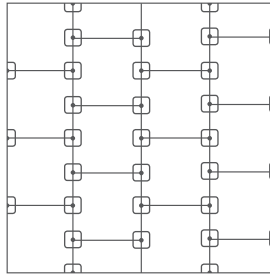

Brick and Ashlar

Lay anchor rows and place a FlexLok® tab at every joint. Install remaining carpet tiles, placing FlexLok® tabs as illustrated in the diagram. Place a FlexLok® tab at every joint around the perimeter of the room. Brick and Ashlar installation will install 110 sq yds of carpet.

Contact Info:

Technical Services Department
235 Industrial Blvd.
P.O. Box 800
Chatsworth, GA 30705
field_services@mohawkkind.com
800.833.6954

Aladdin
COMMERCIAL